

REPLACEMENT BULBS

Replacement bulbs are available by calling (888) 328-8701 or visit our website at microsun.com.

Use item No. 9901 when reordering.



CARE AND USE INSTRUCTIONS:

1. FOR AUXILIARY SIDE SOCKETS, USE LOWER WATTAGE LED OR CFL BULBS or 25-WATT (MAXIMUM) INCANDESCENTS.
2. DO NOT USE YOUR LAMP ON DIMMERS OR DIMMING SWITCHES.
3. DO NOT OPEN THE GEAR PACK – NO SERVICEABLE PARTS INSIDE.
4. ALWAYS TURN OFF ALL SWITCHES AND UNPLUG THE LAMP FROM THE WALL SOCKET BEFORE CHANGING BULBS.
5. NEVER LEAVE ANY SOCKETS EMPTY WHEN LAMP IS PLUGGED IN.
6. DO NOT USE ANY BULB OTHER THAN A MICROSUN BULB IN THE CENTER MICROSUN SOCKET.
7. ALTHOUGH IT IS UNLIKELY TO OCCUR, THE MICROSUN BULB CAN CAUSE SERIOUS SKIN BURN AND EYE INFLAMMATION FROM SHORT-WAVE ULTRAVIOLET RADIATION IF THE MICROSUN GLASS BULB BREAKS AND THE ARC CONTINUES TO OPERATE. IF YOUR BULB CRACKS, BREAKS OR SHATTERS, IMMEDIATELY TURN POWER OFF AND DISCONNECT YOUR LAMP, REMOVE THE BULB AND ORDER A REPLACEMENT BULB. DO NOT ATTEMPT TO OPERATE YOUR LAMP UNTIL A NEW MICROSUN BULB IS IN PLACE. (Complies with FDA radiation performance standards 21 CFR, Subchapter J.)
8. FABRIC SHADES SHOULD ONLY BE VACUUMED. DO NOT ATTEMPT TO WASH OR DRY CLEAN FABRIC SHADES. WOOD, BRASS OR HAND-PAINTED PORCELAIN LAMP BASES SHOULD BE CLEANED WITH NORMAL DUSTING. DO NOT USE ANY TYPE OF ABRASIVE CLEANERS ON ANY LAMP BODY.



© 2014 Microsun, LLC. "Microsun" and "It's a Whole New Light" are trademarks or registered trademarks of Microsun LLC

Microsun® Table & Floor Lamps

8261 State Route 235, Dayton, OH 45424 PH (888) 328-8701

OWNER'S MANUAL

It's a Whole New Light™

Congratulations! You now own a lamp featuring the revolutionary Microsun Lamps technology which provides you with better, whiter, glare-free light. The system has some unique characteristics that you need to be familiar with:

FOR INDOOR USE ONLY

INSTALLING BULBS / REPLACING BULBS:

CAUTION: When installing bulbs, TURN OFF ALL SWITCHES AND UNPLUG THE LAMP FROM THE WALL SOCKET TO ELIMINATE POSSIBLE SHOCK HAZARD. IF LIGHT BULBS ARE HOT TO THE TOUCH, PLEASE ALLOW BULBS TO COOL BEFORE HANDLING. DO NOT OPERATE THIS LAMP WITH MISSING BULBS OR PARTS.

THE MICROSUN BULB WILL ONLY OPERATE IN THE CENTER VERTICAL MICROSUN SOCKET. TO PREVENT RISK OF FIRE OR PRODUCT DAMAGE, DO NOT ATTEMPT TO OPERATE ANY OTHER BULB OR DEVICE, INCLUDING ENERGY-SAVING BUTTONS, DISCS OR ADAPTERS IN THE CENTER VERTICAL MICROSUN SOCKET.

LIGHT OUTPUT / ENERGY:

Microsun bulbs use 68-watts to produce 5,300 lumens of crisp, clean natural light – perfect for working, reading or a bright, cheerful room ambience. Two auxiliary bulbs (LED, CFL or incandescent) provide a softer level of light for a more subdued room atmosphere.

CAUTION: TO PREVENT RISK OF FIRE, DO NOT USE THIS LAMP ON DIMMERS OR DIMMING CIRCUITS. IN THE SIDE SOCKETS, USE 25-WATT (MAXIMUM) INCANDESCENT OR LOWER WATTAGE LED OR CFL BULBS. AUXILIARY BULBS ARE USED AT AN ANGLE AND MUST BE KEPT AT A SAFE DISTANCE FROM THE LAMP SHADE.

ASSEMBLING THE MICROSUN SYSTEM:

Unpack all contents of the boxes and make sure all of the following parts have been included and are in good condition:

- | | |
|----------------------------------|--------------------|
| (1) MICROSUN table or floor lamp | (1) Harp |
| (1) Shade | (1) Finial |
| (1) MICROSUN bulb | (1) Owner's Manual |

STEP ONE – INSTALLING THE HARP

IMPORTANT: MAKE SURE LAMP IS UNPLUGGED FROM WALL OUTLET AND ALL SWITCHES ARE IN THE “OFF” POSITION BEFORE BEGINNING.

- Squeeze harp together and insert into harp slots (see Fig. 1). Pull up gently to secure harp into sockets.

WARNING: THE MICROSUN SOCKET CLUSTER AND HOUSING CONTAIN NO USER-SERVICEABLE PARTS. DO NOT OPEN THE HOUSING – NO SERVICE-ABLE PARTS INSIDE.

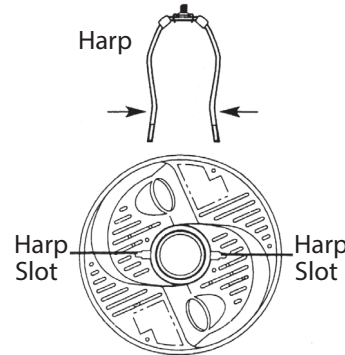


Figure 1

STEP TWO – INSTALLING THE BULBS:

- MAKE SURE ALL SWITCHES ARE OFF AND THE LAMP IS UNPLUGGED FROM THE WALL OUTLET.
- Install two (2) low watt bulbs* into the two angled side sockets (See Fig. 2).
- Install the Microsun bulb into the center vertical socket (see Fig. 2).

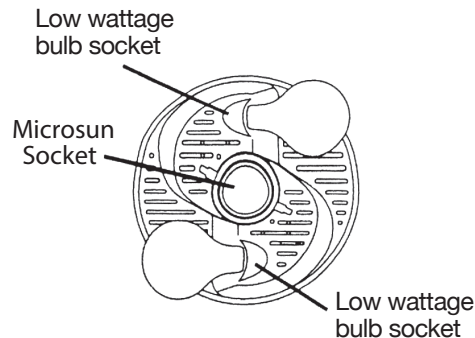


Figure 2

SWITCHING:

Your *Microsun* System has two separate switches:



The switch on the left simultaneously controls the two (2) low-wattage sockets. *



The switch on the right controls the Microsun socket.

NOTICE:

During starting or operation of the *Microsun* system, you may experience static or interference with AM radios, wireless telephones or other devices sensitive to high frequency. You may correct an interference problem by placing the *Microsun* lamp further from the affected device or plugging either into a different outlet. Use only on 120V, 60 Hertz circuits. If you notice interference and are unable to correct the problem, please call **1-800-328-8701**. You can also e-mail us at support@microsun-lamps.com. Orders may be placed through our website at microsun.com.

STARTING THE MICROSUN BULB:

When first turning the switch on the right “ON”, **the *Microsun* system will take 60 seconds to reach its full brightness.** During warm-up, some flickering is normal. A rose-colored flash of light may occur during warm-up. This is also normal.

Always allow the *Microsun* bulb to reach its full brightness (about 60 seconds). **DO NOT TURN THE LAMP ON AND OFF DURING THE WARM-UP PERIOD.** This will delay the time required for full intensity light.

The switch with the *Microsun* logo operates the *Microsun* bulb. The switch on the left operates the two low wattage bulb sockets only. You may operate both switches at the same time or independently.

RE-STARTING THE MICROSUN BULB:

Microsun bulbs will not immediately re-start if they are hot. If the MICROSUN switch is turned off and then immediately back on, it could take up to 2-3 minutes to re-start.